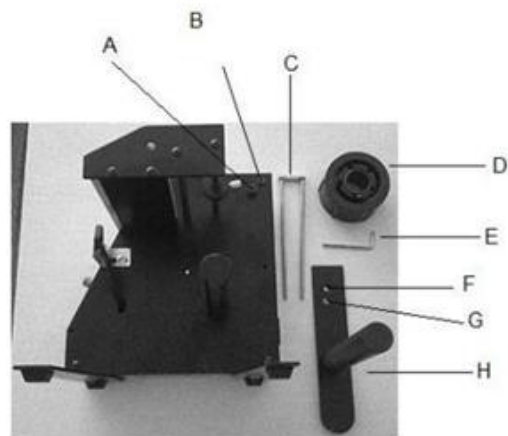# U.S. Solid® Automatic Label Dispenser User Manual
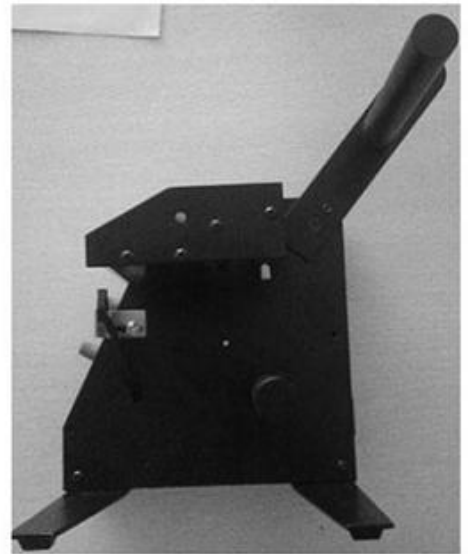
Notices:

The information in this document is subject to change without notice. No warranty of any kind is made with regards to this manual. No liability is assumed for errors contained herein or for incidental or consequential damage in connection with the furnishing, performance, or use of this manual.

Joyfay holds all rights to this manual. No parts of this document may be reproduced, or translated into another language without prior written consent.

1. Unpacking and Setup

A Screw A   B Screw B
C Binding   D Core diameter adapter
E Screw driver   F Screw hole A
G Screw hole B   H Guide Roller Bar

(Refer to old machine pictures)

Step 1   Unscrew A. Place H on the upper-right corner of the dispenser, making B fit into G, and A's screw hole is aligned with F.

Step 2   Screw A into F.

2. Operation Instruction

A step by step video tutorial on operating this dispenser is available at http://www.youtube.com/watch?v=PJ4IlHk5R2A&feature=youtu.be

a. counter   b. length control   c. speed control   d. power
e. guide roller   f. core diameter adapter   g. label guide
h. label path open   i. binding   j. label sensor   k. rewinder

1. Plug(f) core diameter adapter into the core of label stock roll, and place them onto (e) guide roller.
2. Push(h) label path opener to move the transparent plastic plate, and pull the loose end of the label stock through.
3. Fix the loose end of label stock on(k) rewinder by (i) binding.
4. Adjust the position of (g) label guide as needed.

3. Specifications

Brand	U.S. Solid
SKU:	JFLD00001
U.S. Solid Model:	USS-LD00001
GTIN-12 (U.P.C.)	888107008880
Display	6 digit LED
Applicable Label Width	10 - 140 mm
Applicable Label Length	4 - 200 mm
Inner Roll Diameter	25 - 75 mm
Max. Roll Diameter	250 mm
Power Supply	AC110V 60Hz AC 220V 50Hz
Net. Weight and Size	4.0 kg 210(L) x 210(W) x 220(H) mm

If any question, please feel free to contact us at service@joyfay.com or +1 (800) 209-4177.